


Model: WBBC538SCV
Service code: WBC538VCLV020B2505
Main body


WB BC 538 SCV

r.v. 2026

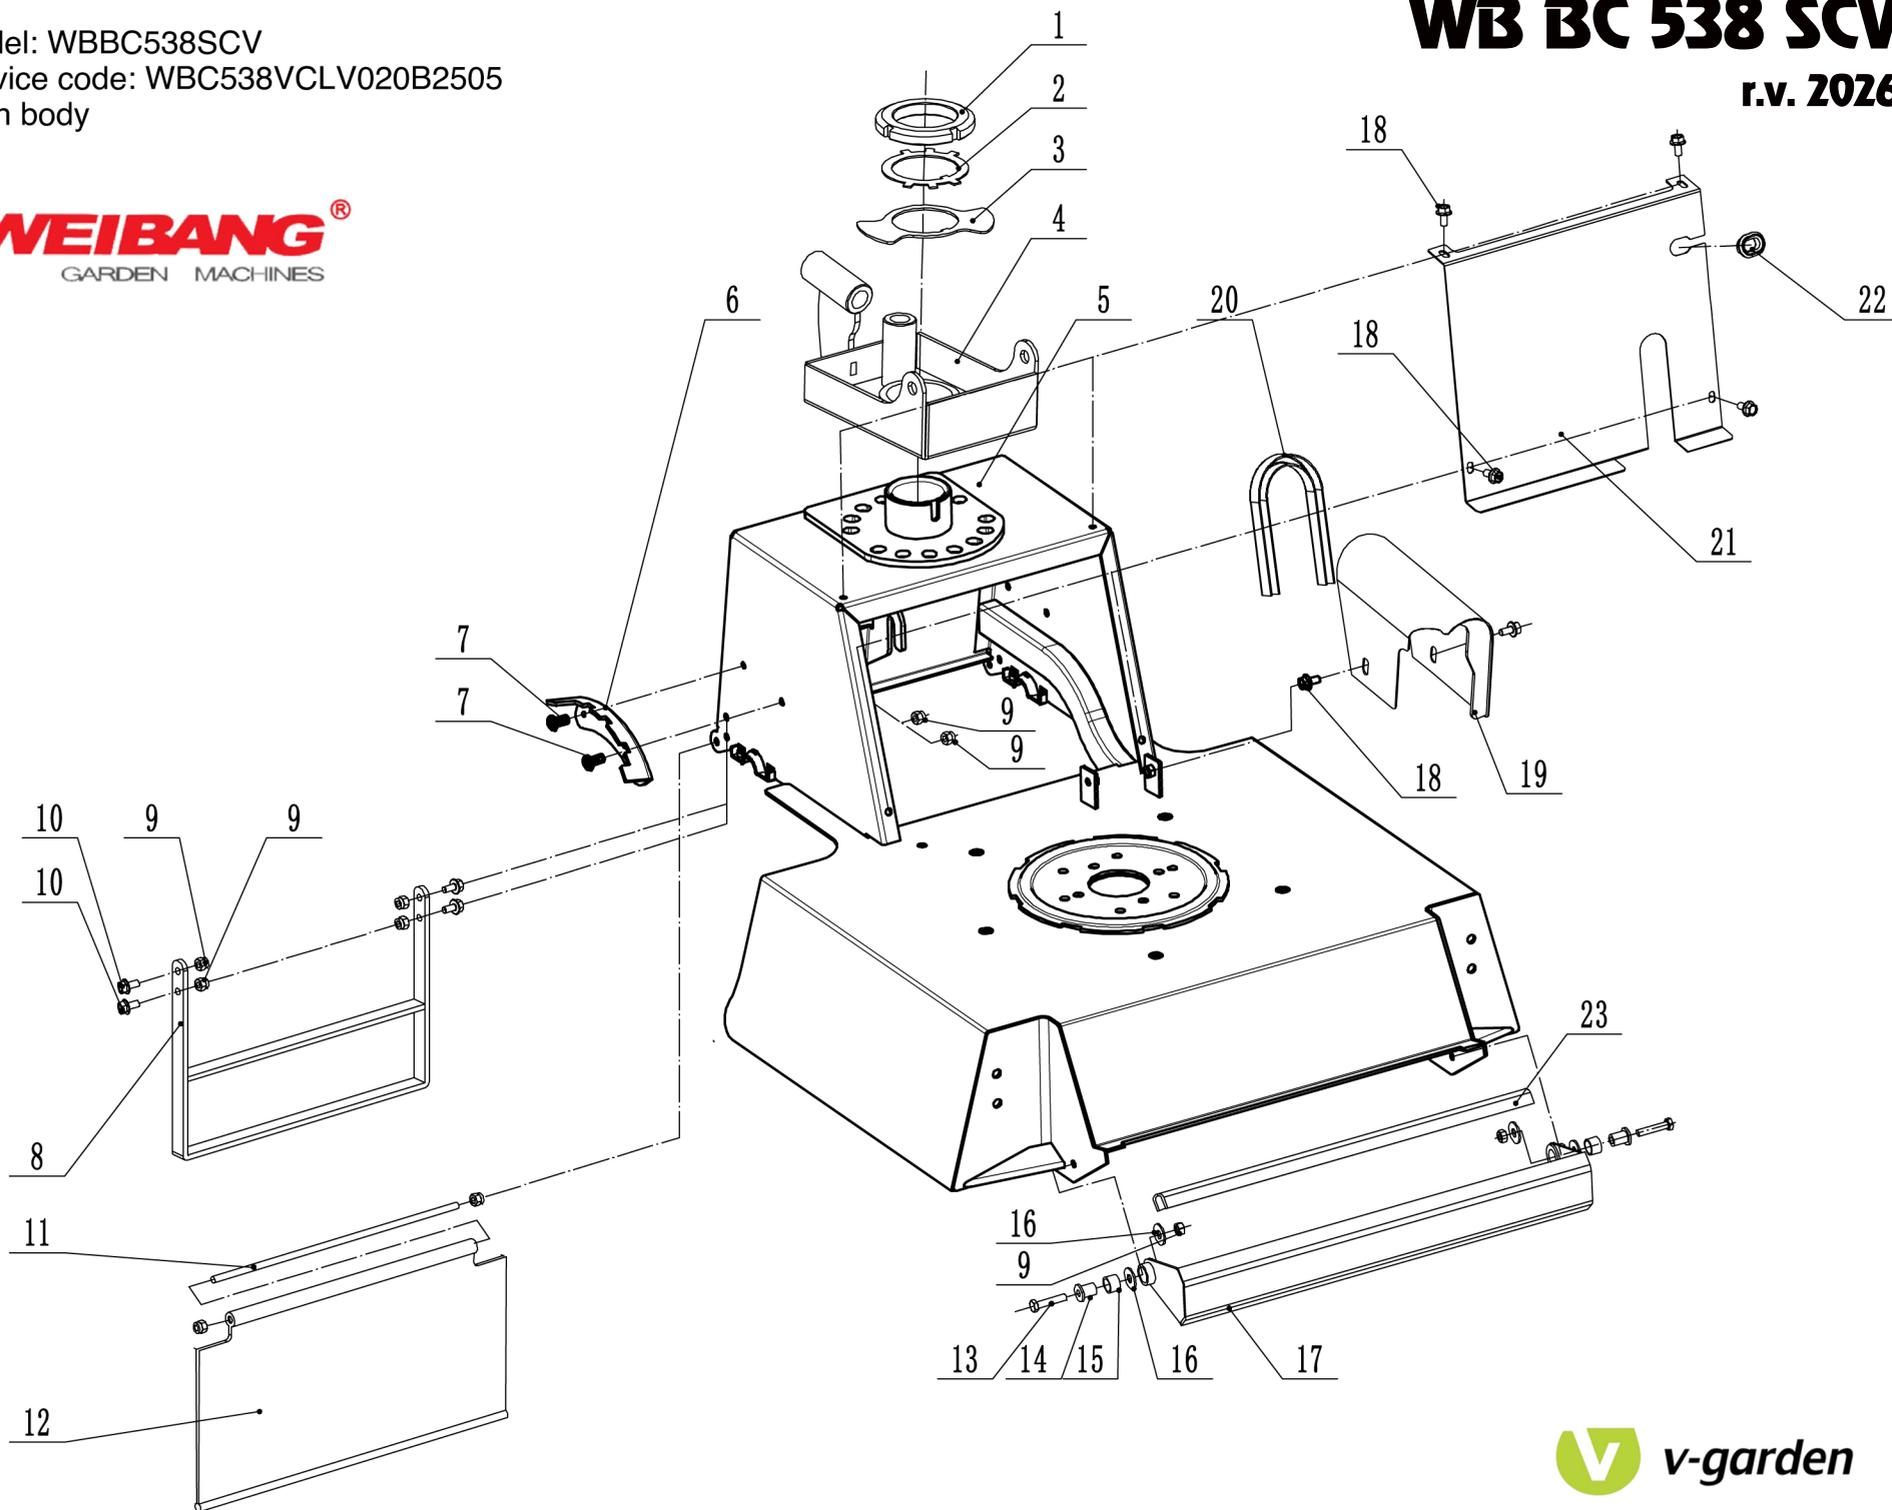


1 Part1 Main Body		
No.	ID zboží	Název
1	0219060000	Circle nut - M60
2	0304060000	Tab washer for circle nut
3	BC53AC01000/44	Limit washer
4	BC45TC02000/44	Rotating base
5	1411000144	Chassis
6	BC45TC14000B2/22	Indexing plate
7	0104006016	Screw - M6*16
8	BC53AC08000/44	Rear guardrail
9	0202006000	Nylon lock nut - M6
10	0104006020	Bolt - M6*20
11	BC53AC11000/02	Front shaft for baffle
12	BC53AC04000	Rear deflector
13	0101006030	Bolt - M6*30
14	1411001202	Bolt sleeve
15	5320326010P	Bearing
16	0301006000	Flat washer - ϕ 6
17	1411001344	Flip cover
18	4820104010	Screw - M6*12
19	1411001744	Universal joint shield
20	BC45TC10000	Dust guard
21	14110020	Front baffle
22	360122010C	Rubber ring
23	14110021	flip leather case

Model: WBBC538SCV
Service code: WBC538VCLV020B2505
Blade system

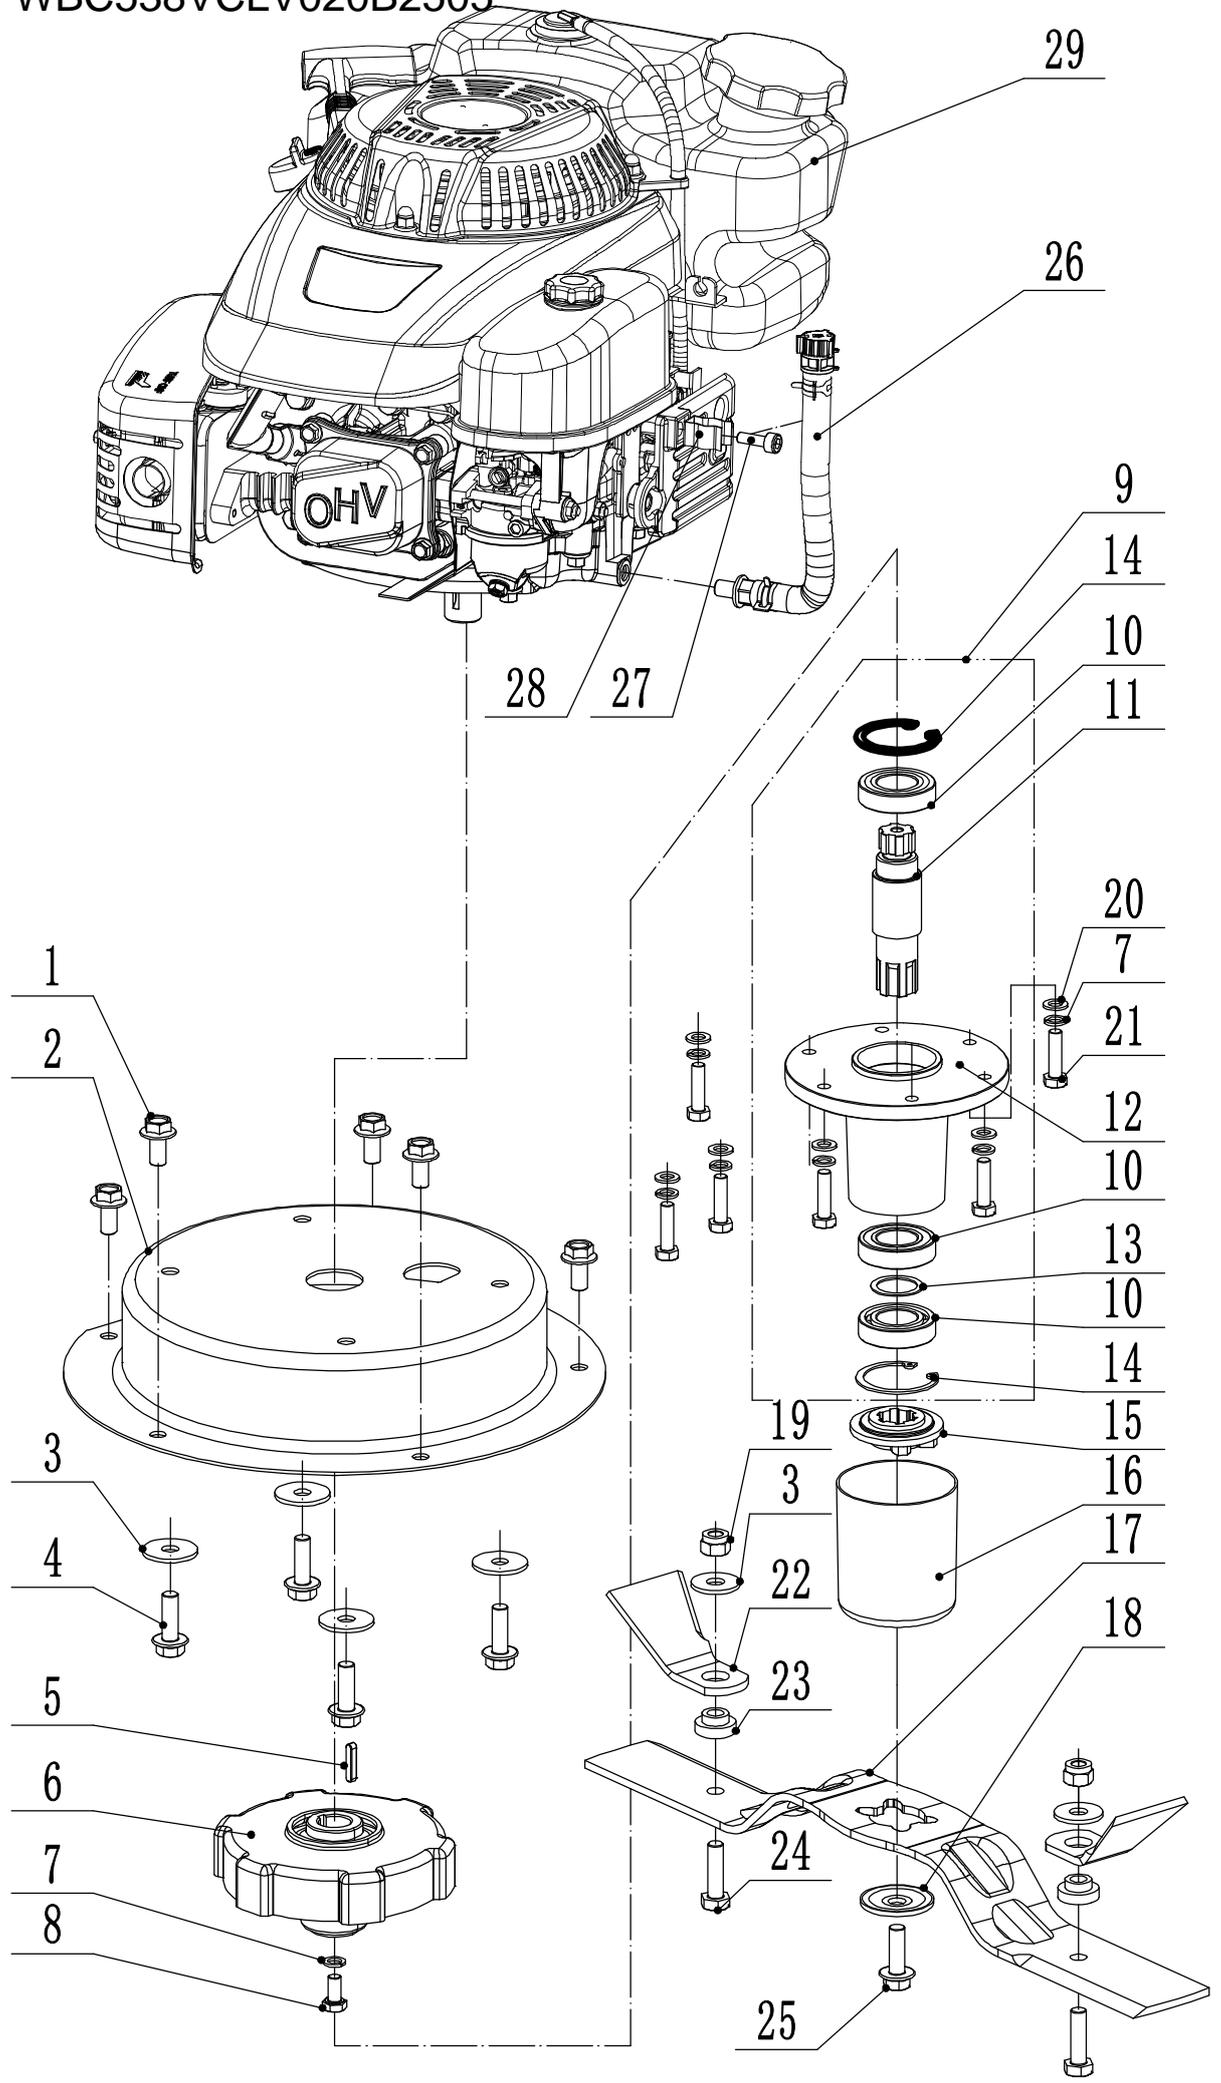


2	Part2 Blade System	
No.	ID zboží	Název
1	0102010020	Bolt - M10*20
2	1412000344	Engine seat
3	0302010000	Big washer - M10
4	48R0162413	Bolt - 5/16-24*25
5	1102005018	Key - 5*5*18
6	BC53AB01000B1	Safety clutch
7	0401008000	Circlip - M8
8	0101008025/10P9	Bolt - M8*25
9	BC53AB02000	Blade shaft component
10	6005-2RS	Bearing
11	BC53AB03000	Blade shaft
12	BC53AB05000/22	Bearing seat
13	BC45BB07000B1/02	Spacer for blade shaft bearing
14	0901047000	Circlip - M47
15	BC53AB06000	Adapter
16	BC53AB07000/01	Grass proof of protective sleeve
17	BC53AB04000/22	Blade
18	BC53AB08000/04	Belleville spring
19	0202010000	Nylon lock nut - M10
20	0301008000	Flat washer - M8
21	0101008030	Bolt - M8*30
22	BC45TB09000/22	Flail blade
23	BC45TB10000/02	Spacer bush for flail blade
24	0101010035/10P9	Blade - M10*35
25	0102010030/10P9	Central bolt
26	292980356-0001	Tube comp.
27	0103006012	Screw - M6x12
28	Z123C11000/02	Tube clamp
29	LC1P75F/L3372	Engine

Model: WBBC538SCV
Service code: WBC538VCLV020B2505
Handle and controls

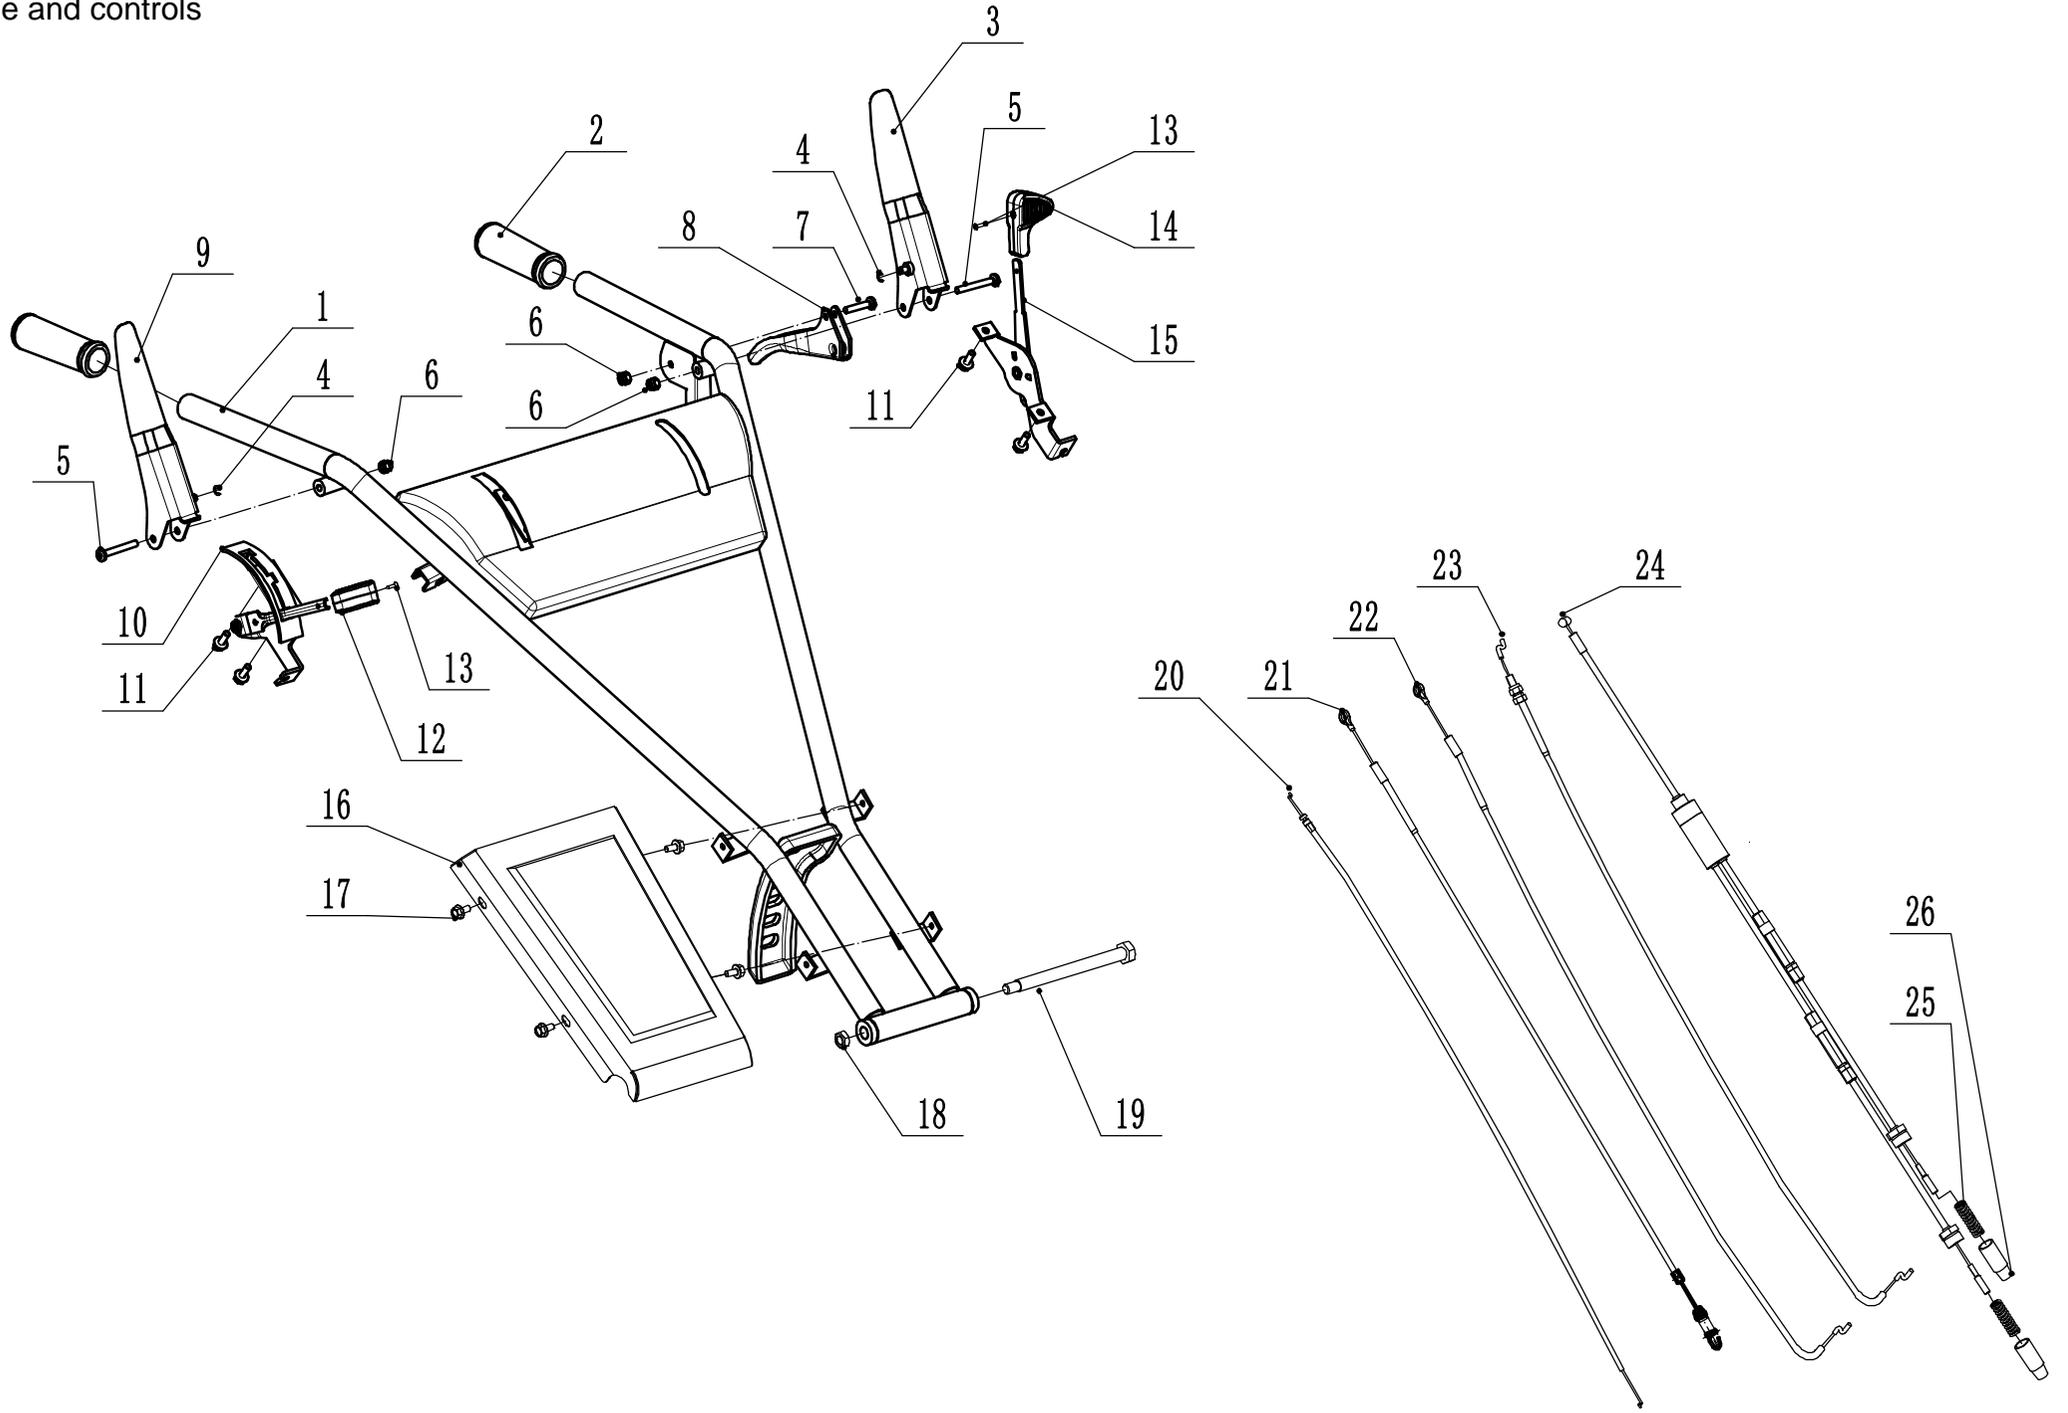


3 Part3 Handle And Controls		
No.	ID zboží	Název
1	BC53AD01000/44	Handle
2	45A0323010	Big hande sheath
3	BC53AD02000/01	Drive handle
4	1301005000	Criclip - M5
5	0104006045	Screw - M6*45
6	0202006000	Nylon lock nut - M6
7	0104006025	Screw - M6*25
8	BC45TD02000/01	Rotating plate for handle
9	BC53AD03000/49	Brake handle
10	BC45TD11000	Speed control bracket
11	0102006016	Bolt - M6*16
12	5380508010	Speed control grip
13	0106003013	Screw - ST2.9*13
14	5380510010	Throttle grip
15	BC53AD04000	Throttle bracket
16	BC45TD13000/44	Shield
17	0102006012	Bolt - M6*12
18	0202012000	Nylon lock nut - M12
19	BC45TD12000/02	Step bolt
20	YM98-1010-A1	Throttle cable
21	BC53AD05000	Clutch cable
22	BC53AD06000	Brake cable
23	BC45TD17000	Speed control cable
24	BC45TD16000	Height and angle adjustment cable
25	BC45TD21000/02	Spring
26	BC45TD22000/02	Cable core

Model: WBBC538SCV
Service code: WBC538VCLV020B2505
Rear axle

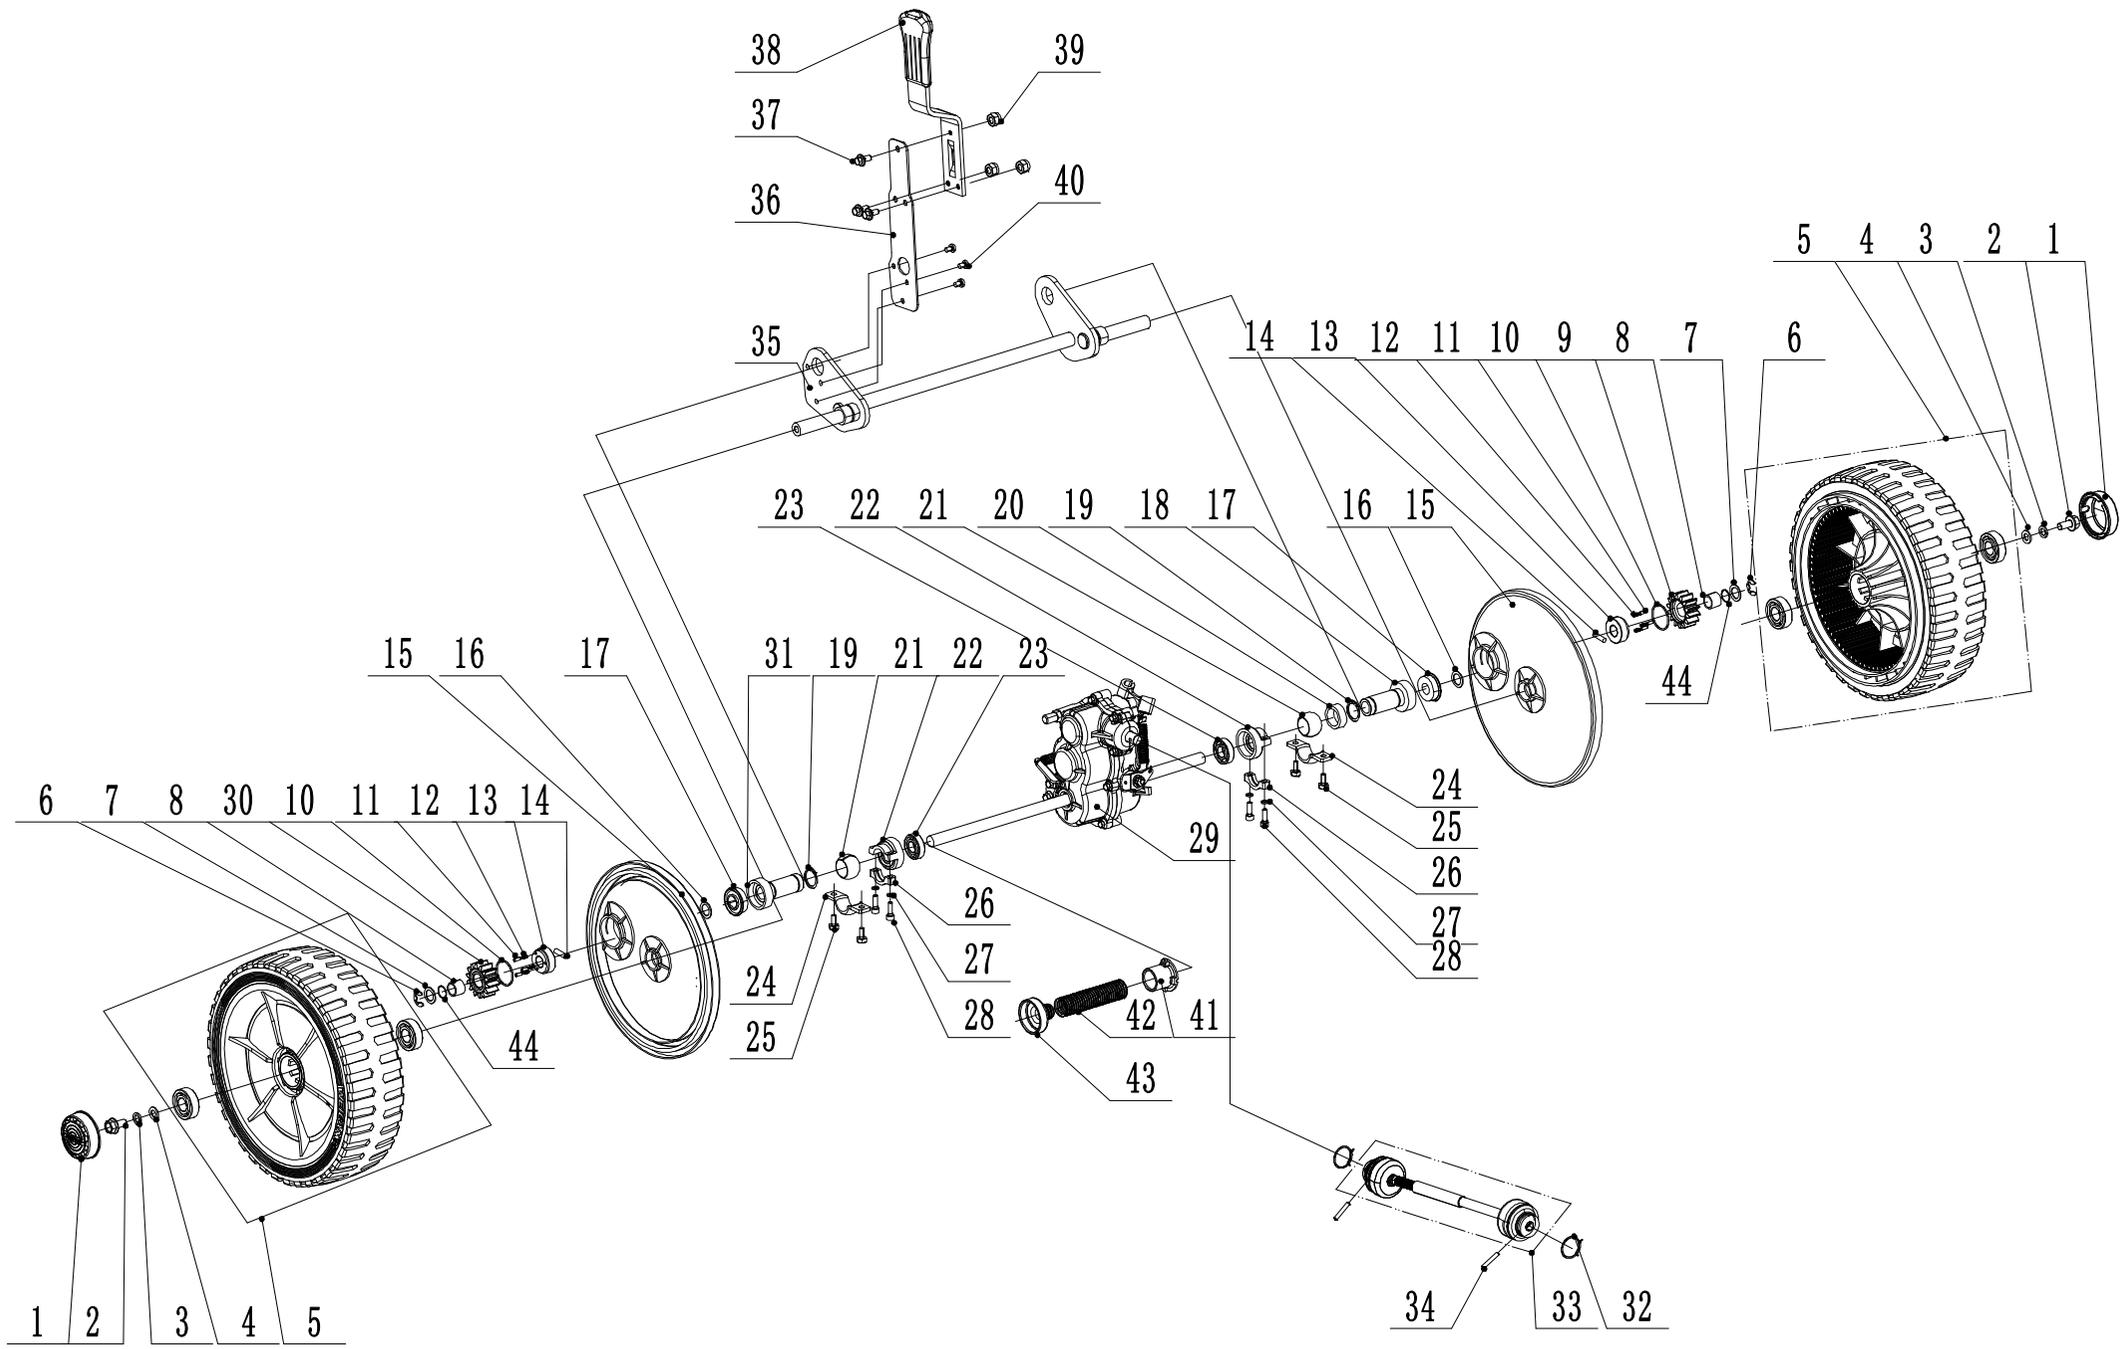

4	Part4 Rear Axle	
No.	ID zboží	Název
1	BC45TE01000	Wheel cap
2	0102008016	Bolt - M8*16
3	0401008000	Spring washer - M8
4	0301008000	Flat washer - M8
5	BC45TE02000C2	Polyurethane wheel
6	1301009000	Circilp - M9
7	5020311010A1/04	Anti-friction washer
8	5320326010P	Plastic bearing
9	HQ000100010	Left drive pinion
10	1401025015	O-sealing ring
11	HQ000100030	One-way telescopic pin
12	HQ000100040	spring for One-way telescopic pin
13	HQ000100050	One-way seat
14	HQ000100060	Pin for one-way seat
15	BC45TE03000C3	Dust cover
16	1001012000	Circilp - M12
17	5310213010	Bearing
18	5320324021/02	Left bearing seat
19	1001020000	Circilp - M20
20	BC45BE02000B1/02	Spacer bush for transmission
21	5320328010	Bearing
22	5320324022	Bearing base
23	R8-2RS	Bearing
24	5320114020/02	Upper bearing base
25	0102006012	Bolt - M6*12
26	5320324023	Cap for bearing base
27	0302005000	Spring washer - M5
28	0123005020	Screw - M5*20
29	BC53AE01000	Transmission assembly
30	HQ000100020	Right drive pinion
31	5320325021/02	Right bearing sleeve
32	HQA02000002	Check ring
33	BC53AE02000	Universal drive shaft
34	HQA020000090	Pin
35	BC53AE03000/01	Rear axle
36	BC45BD11000B1/01	leaf spring for regulating handle
37	0104006014	Screw - M6*14
38	5360310010/40	Regulating handle lever
39	0202006000	Nylon lock nut - M6
40	0113005008	Screw - M5*8
41	BC45TE07000	Transmission end cover
42	BC53AE04000	Corrugated pipe
43	BC45TE09000	Bearing seat cover
44	140101200P6	O-sealing ring

Model: WBBC538SCV
Service code: WBC538VCLV020B2505
Universal wheel

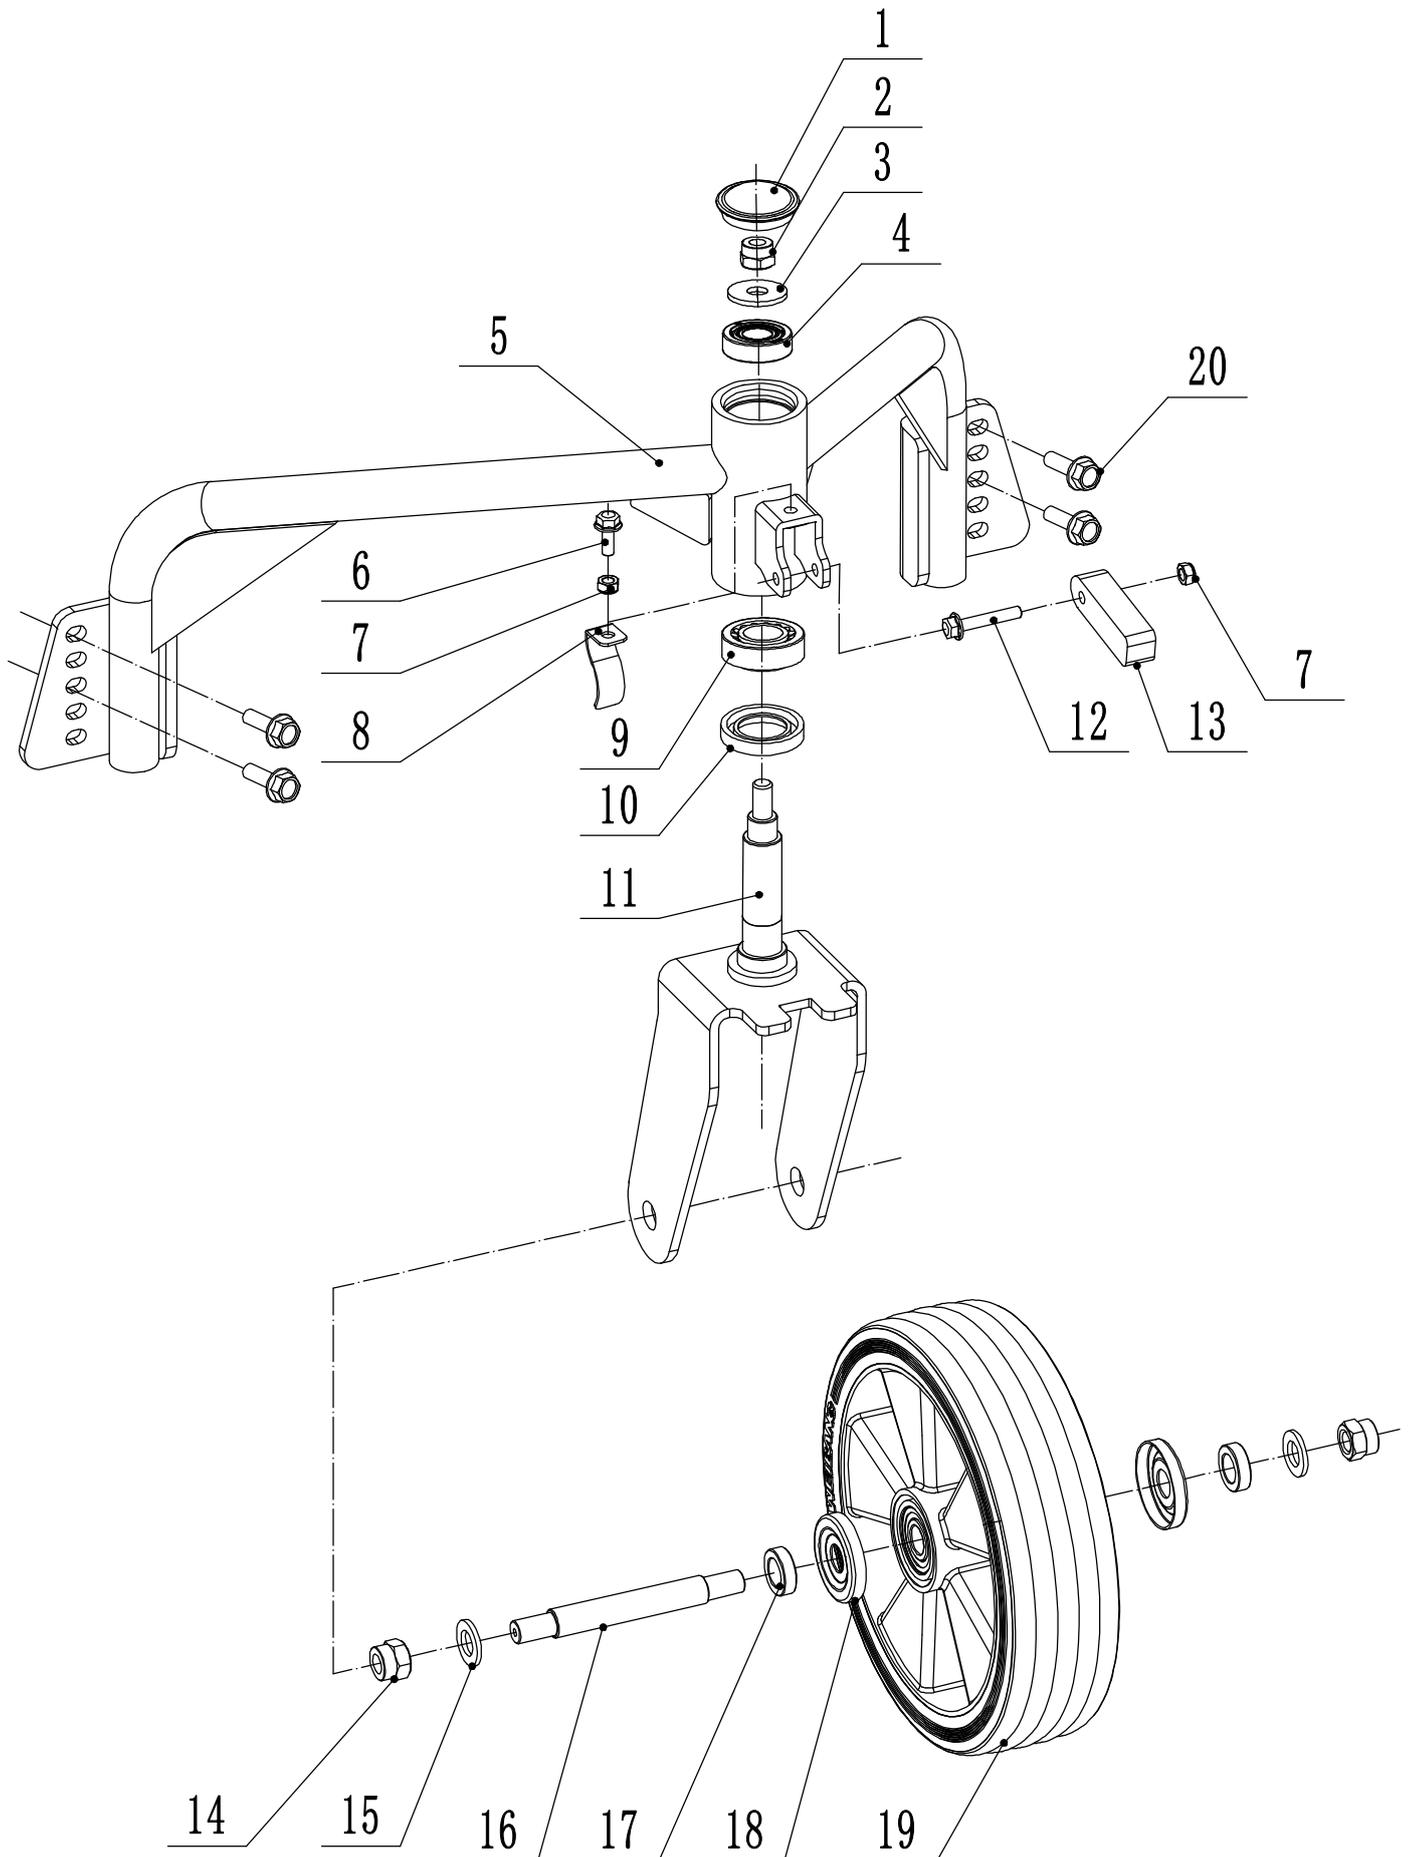

5 Part5 Universal Wheel		
No.	ID zboží	Název
1	3486001402	Dust cover
2	0202010000	Nylon lock nut - M10
3	0302010000	Big flat washer - ϕ 10
4	30202	Bearing
5	1413000144	Wheel bracket
6	0102006016	Bolt - M6*16
7	0202006000	Lock nut - M6
8	GT68WD18000/01	Front wheel locking tab
9	32004	Bearing
10	34860008	Oil seal
11	1383002444	Universal wheel bracket
12	13810166	Disc brake mounting bolt
13	GT68WD19000/40	Locking tongue pressing block
14	0202012000	Lock nut - M12
15	0301012000	Flat washer - ϕ 12
16	1383002302	Universal wheel shaft
17	1383002202	Spacer sleeve B for universal wheel
18	1383002102	Universal wheel waterproof cover
19	13830017	Universal wheel
20	0102008025	Bolt - M8*25